



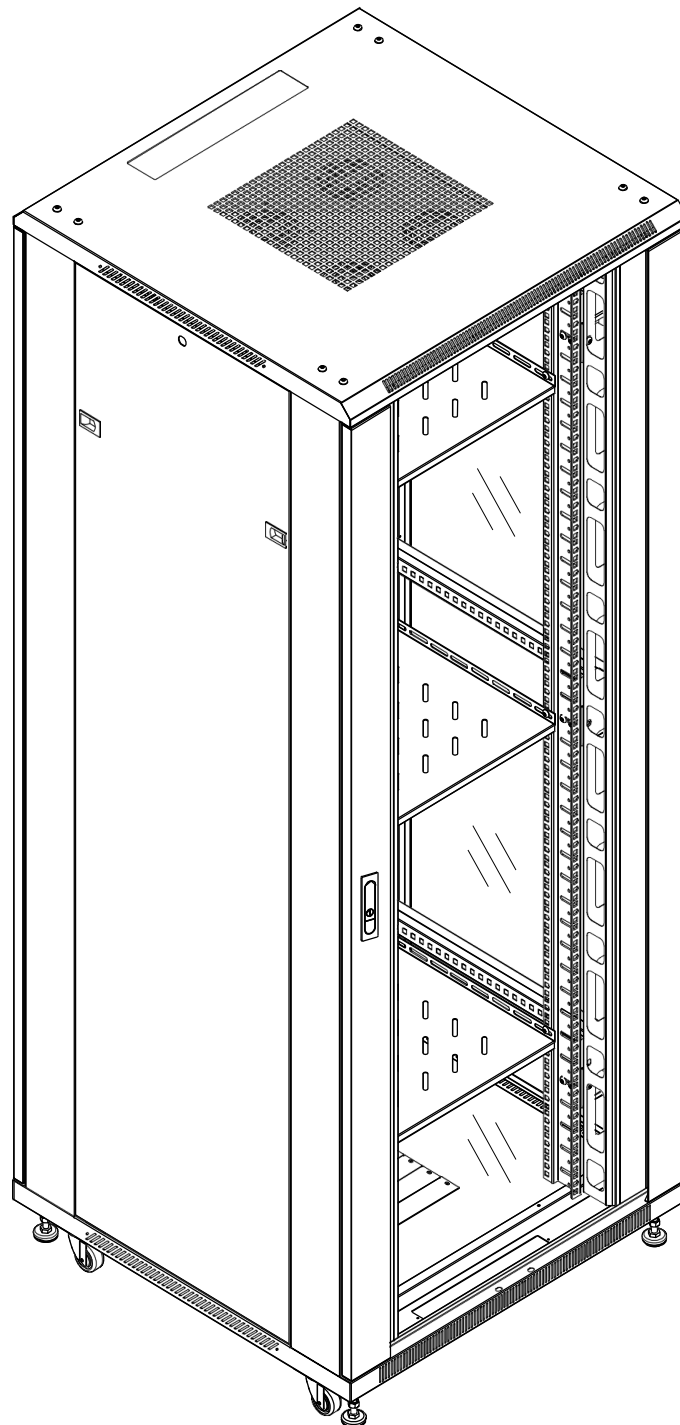

Assembly manual

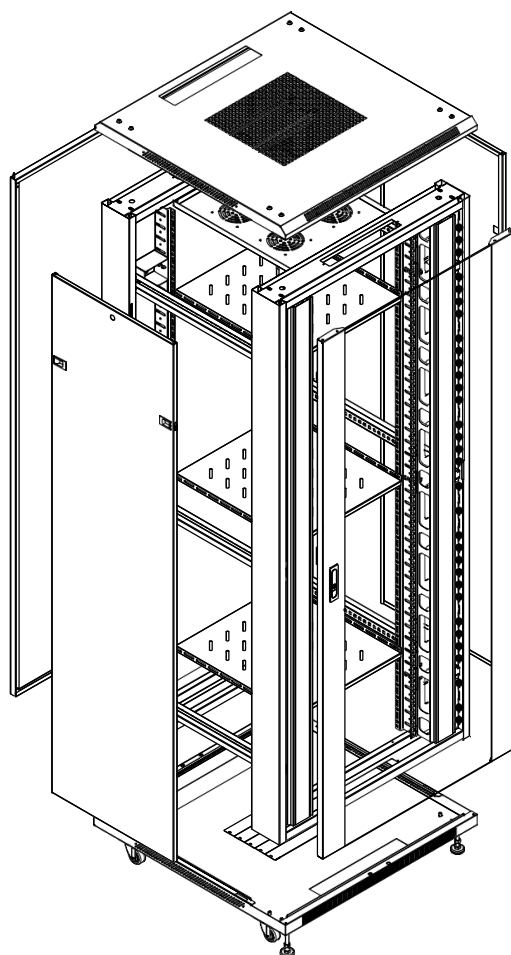

ITEM	Capacity	47U	42U	37U	32U	27U	22U	18U
	QTY							
A:M8X12	16	16	16	16	16	16	16	16
B:M8	16	16	16	16	16	16	16	16
C:M6 x 12	96	96	96	96	96	64	64	64
D:M6	36	36	36	36	36	24	36	36
E:M6 x 12cross	16	16	16	16	16	16	16	16
F:M6	48	48	48	48	48	32	32	32
G:M5 x 10cross	4	4	4	4	4	4	4	4
H:M4 x 8cross	18	18	18	18	18	18	18	18
I:ø5	2	2	2	2	2	2	2	2
J:M10 x 70	4	4	4	4	4	4	4	4
Mounting Angle	6	6	6	6	6	4	4	4



A:M8 x 12



B:M8



C:M6 x 12



D:M6



E:M6 x 12cross



F:M6



G:M5 x 10cross




H:M4 x 8cross



I:ø5





J:M10 x 70

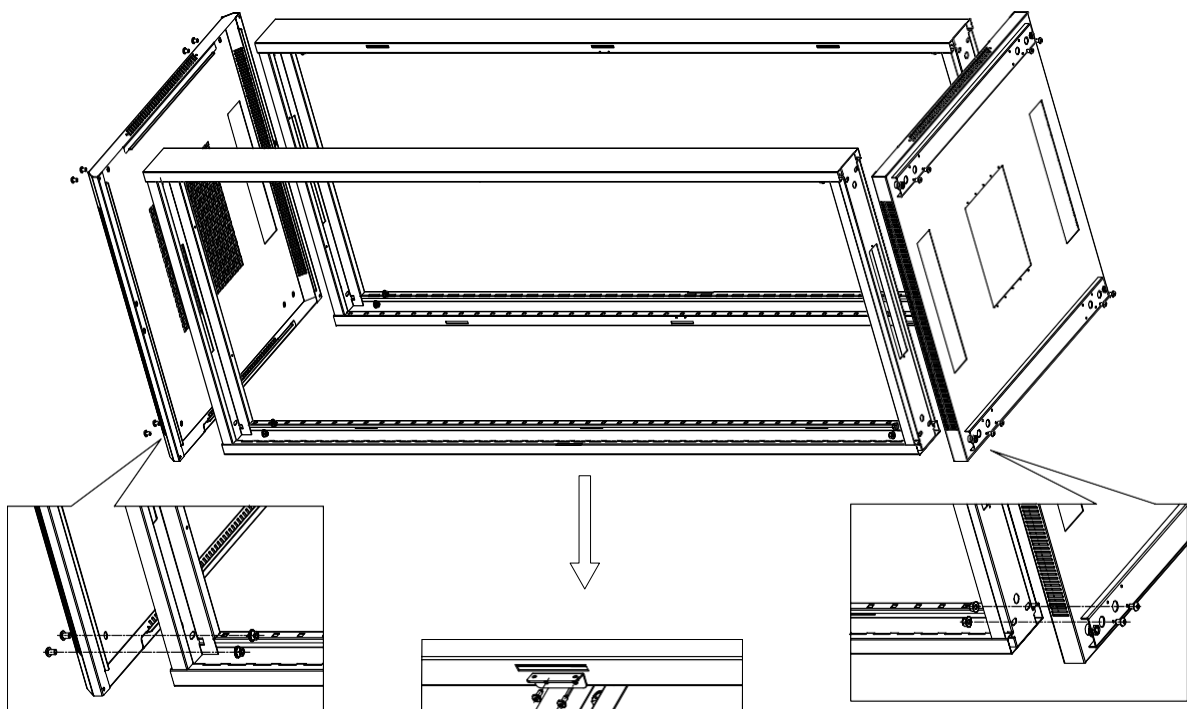


A:M8 x 12 8PCS
B:M8 8PCS

A:M8 x 12 8PCS
B:M8 8PCS


H:M4 x 8 8PCS

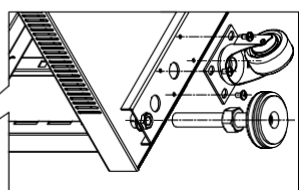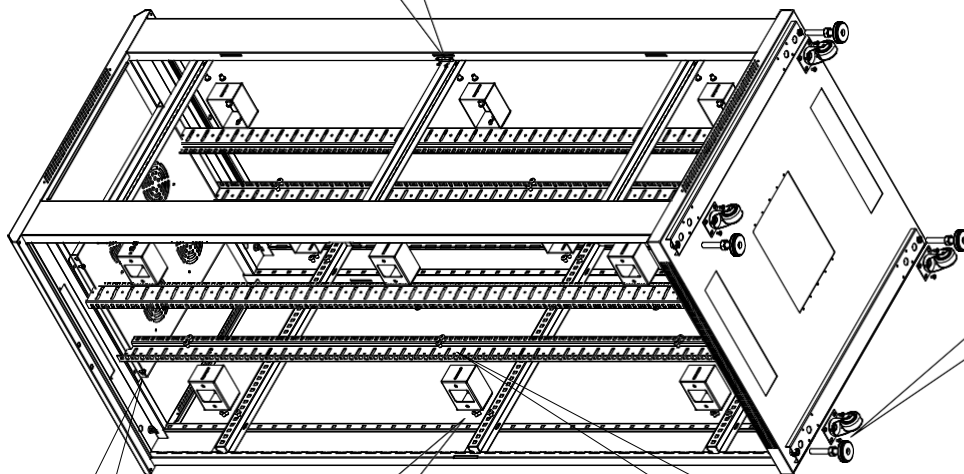


D:M6 x 12cross 16PCS
J:M10 x 70 4PCS

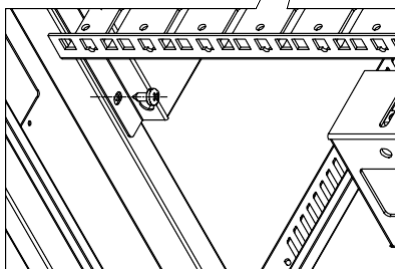

G:M5 x 10cross 4PCS

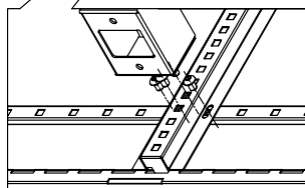

C:M6 x 12 48PCS
F:M6 48PCS

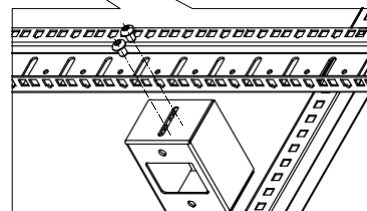

C:M6 x 12 24PCS
D: M6 24PCS

